MANUAL TX-S

Compatible with Sommer 868 Mhz


BATT.3V



With compliance with DIRECTIVE 1999/05/CE

TRASMETTITORE/EMISOR/TRANSMITTER/EMETEUR/SENDER/EMISSOR/PILOTY MANUFACTURED BY: 806450563

The remote control **TX-S** is compatible with original Sommer receivers 868 Mhz FM. It works exactly in the same way that the original remote.

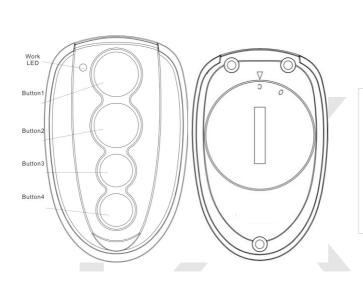



TECHNICAL FEATURES

- ✓ Model TX-S
- ✓ 1 BATT CR2032-3V
- ✓ FREQ 868,4 MHZ
- ✓ STANDAR CHIP
- ✓ THE SOFWARE TXS

1. Programming into the Sommer receiver

Open the receiver. Press once the "SW1" button to select the first channel (OUT1) and twice to select the second channel (OUT2). The LED corresponding to each channel will stay fixed.

2. Programming the TX-S

Press on the TXS the button you want to programme once (a couple of seconds). The LED on the receiver will blink for several seconds while receiving the signal. The remote has been stored.